


# DST Setting Module : 5208

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>

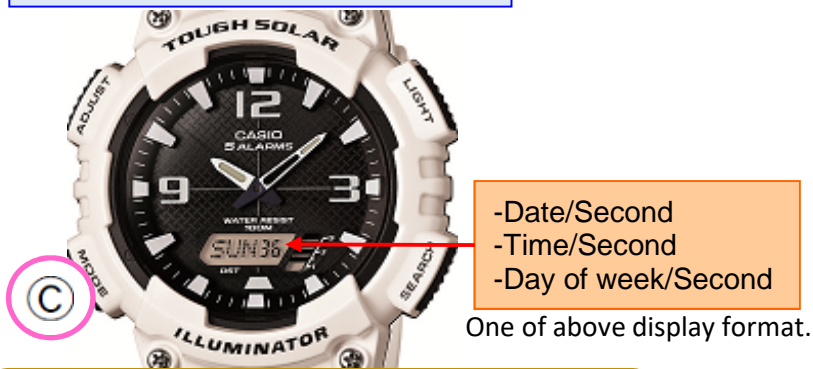

To return to the Timekeeping Mode, press (C) button several times.



In the Timekeeping Mode, hold down (A) button for about two seconds.



City code will be flashing on the screen.



Press (C) button once.

4.



DST setting (ON or OFF) will be flashing on the screen.

5.



Press (D) button to toggle ON and OFF.

6.



Press (A) button to exit the setting screen.